



POLYTEST

WORLD WIDE TESTING FOR QUALITY

HARDNESS TESTERS

The **Modular Durometer System**



Unique and Versatile

Basic Analogue MD-1 Series

- Easy to Read
- Hand/Stand Mountable
- Tolerance Hands
- 1 degree Resolution
- Robust One Piece Body
- Maximum Hand Option



Digital Modular Durometer

Digital M202 Series

- Hand/Stand Mountable
- 0.5 degree Resolution
- ± 1 degree Accuracy
- 1 x SR44 Battery Operation
 - BCD Data Output



Eliminate Awkward Operation

The Duroprobe

- Portable Digital Unit
- Test Timer and Hold Option
- Data Port with RS232 Option
- 36 hour Battery with Re-charger



To Change Scales Simply Switch Modules

Durotech MDS Durometers separate the displacement measurement and display element from a module containing the indenter and spring.

Additional modules can be purchased at any time if the scope of material hardness alters. Each module is individually calibrated, its calibration status being unaffected by the host Durometer.

Durotech Ancillaries




Carry Case

Durometers are supplied complete with a durable, light weight protective carrying case for convenience.

Battery Re-charger

Digital Durometers are supplied complete with an easy to use rapid Battery Re-charger.

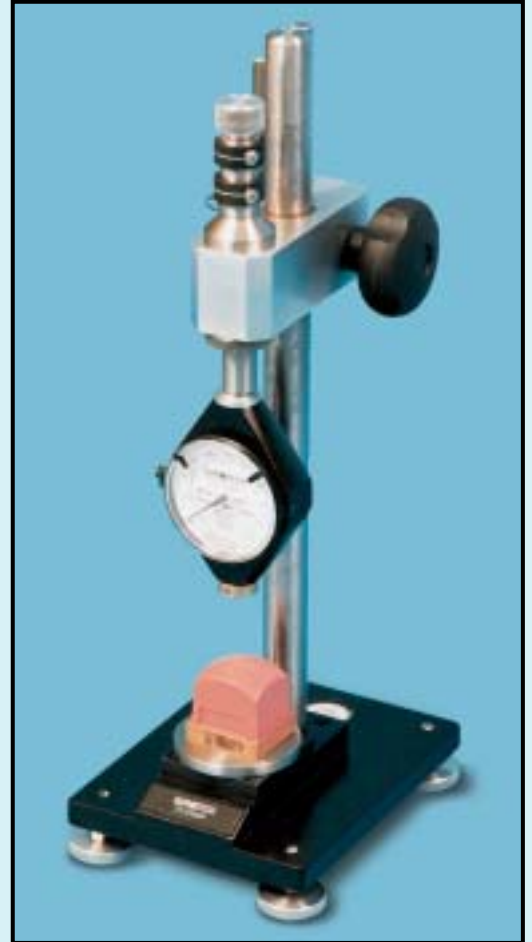

Conformity

Durotech instruments variously conform to:
ASTM D2240, ASTM D1415, DIN 53505, DIN 53519,
ISO 7619, ISO 48 and JIS K6301.
Certificates of calibration supplied



Optimum Accuracy

BS550 Manual Bench Stand

- Throat: 84mm
- Maximum Sample Thickness: 100mm



TEST EQUIPMENT LTD

RAY-RAN TEST EQUIPMENT LTD
KELSEY CLOSE, ATTLEBOROUGH FIELDS INDUSTRIAL ESTATE
NUNEATON, WARWICKSHIRE, CV11 6RS, ENGLAND
TELEPHONE: +44 (0)24 7634 2002
FAX: +44 (0)24 7664 1670
E-MAIL: polytest@ray-ran.com
WEB SITE: <http://www.ray-ran.com>