

BRIDGE CAM GAUGE




Note: Adjustable scale to compensate for point wear

STURDY

ACCURATE


GAL Gage Co. Welding Gauge is made of stainless steel. Undercut depth or crown height scale can be read to 1/32 inch.

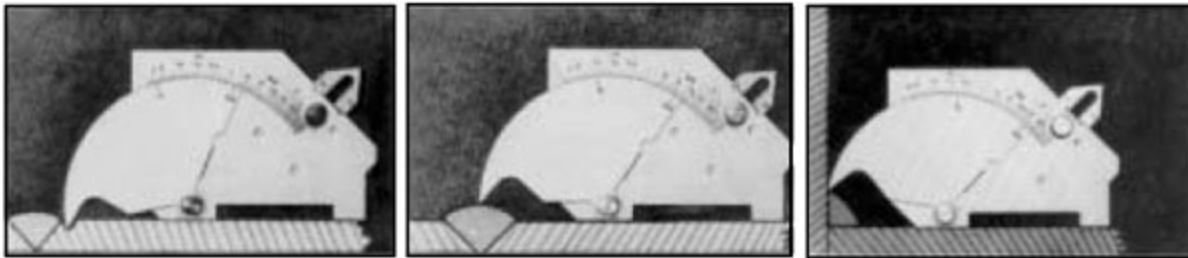

UNDERCUT

EXCESS WELD METAL

FILLET LEG LENGTH

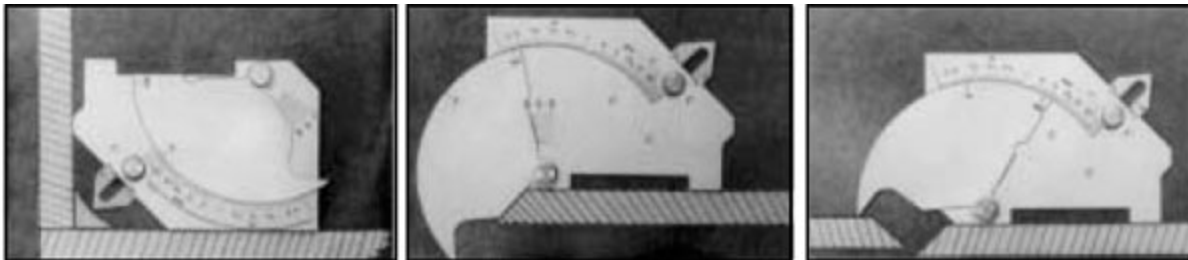

FILLET WELD THROAT

ANGLE OF PREPARATION

MISALIGNMENT

The following measurements are possible either in inches or millimetres.

- Angle of preparation, 0° to 60°
- Fillet weld throat size
- Excess weld metal (capping size)
- Fillet weld length
- Depth of undercut
- Misalignment (high-low)
- Depth of pitting
- General linear measurements up to 60 mm or 2 inches.

Bridge Cam Gauge / TWI Welding Gauge / Cambridge Gauge / Universal Welding Gauges

Part No. Description of Welding Inspection Gauges

GAL-4 Bridge Cam Gauge