

hanatek

www.hanatekinstruments.com


Produce Laboratory
Crease Samples
– All Rule and Die
combinations
– Variable Crease Depth

CCP CARTON CREASE PROOFER

Determine optimum
crease settings

Check substrate
suitability

Check ink and coating
flexibility

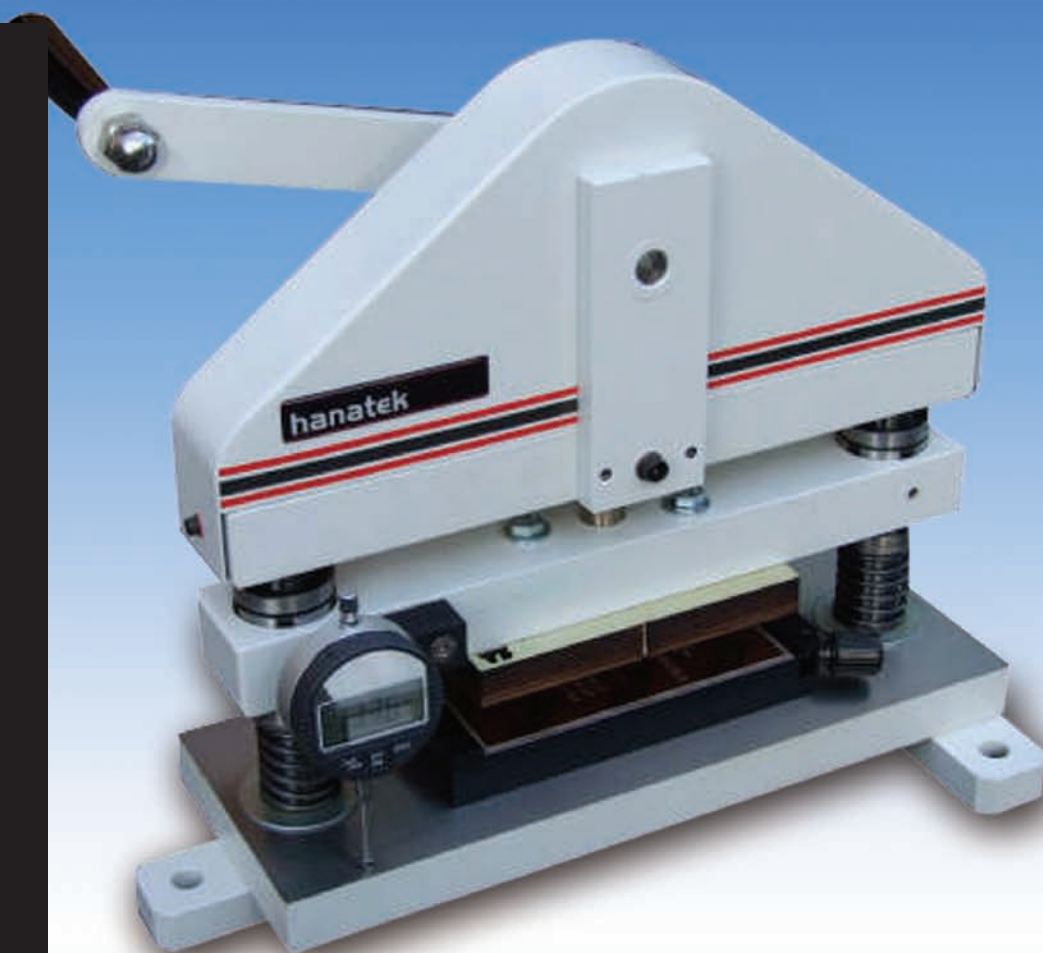

PREDICT CREASE PERFORMANCE

Increase manufacturing efficiency

Improve Quality

APPLICATIONS

Board Manufactures

Ink and Coating Makers

Converters

Packaging Development

Packaging Manufactures

Hanatek products are exclusively
manufactured and distributed by

 RHOPPOINT
INSTRUMENTS

CCP CARTON CREASE PROOFER

The Hanatek CCP allows the user to produce production quality crease samples without committing valuable machine time.

The CCP comes complete with commercially produced rules and dies which are identical to those used on a full sized cut and crease machine

FEATURES

OPTIMISE CREASE SETTINGS

Using the CCP it is quick and easy to produce a number of proofed creases using any commercial rule and die combination.

These can be used to identify a crease with the optimum mechanical properties and cosmetic appearance.

CONTROL SUBSTRATE QUALITY

Important substrate properties can easily compared before printing and converting.

- Check for coating cracking
- Produce production quality creases and predict carton runnability using a Hanatek crease and board stiffness tester.

DETERMINE INK AND COATING FLEXIBILITY

The CCP is used in the ink laboratory to develop flexible coatings that resist cracking on commercial cartons.

SPECIFICATIONS

Substrate	Suitable for any substrate 300-1000µm
Creasing Rules	2 PT, 3 PT, 4 PT
Crease Channels	18 Crease Channels 1-4mm
Crease Depth	Variable
Size	(H)350 x (W)390 x (D)200mm
Weight	25kg

RELATED PRODUCTS

CBT 1 CREASE AND BOARD STIFFNESS TESTER

Determines the board stiffness and crease resistance of carton substrates.

CBT 3 ADVANCED CREASE AND BOARD STIFFNESS TESTER

Profiles the crease forces present during carton converting. Also measures carton opening force and board stiffness.



CBT 1
Crease and Board
stiffness tester



CBT 3
Advanced Crease
and Board
stiffness tester



Certificate No. FM29741

LOCAL AGENT

hanatek

12 Beeching Road | Bexhill-on-Sea | East Sussex | TN39 3LG | UK
 T +44 (0) 1424 739623 F +44 (0) 1424 730600
 info@hanatekinstruments.com www.hanatekinstruments.com

Hanatek products are exclusively manufactured and distributed by

